


1-3kVA UPS settings

1、Chrysalis

- 1) Disconnect AC supply, stay UPS in power off state.

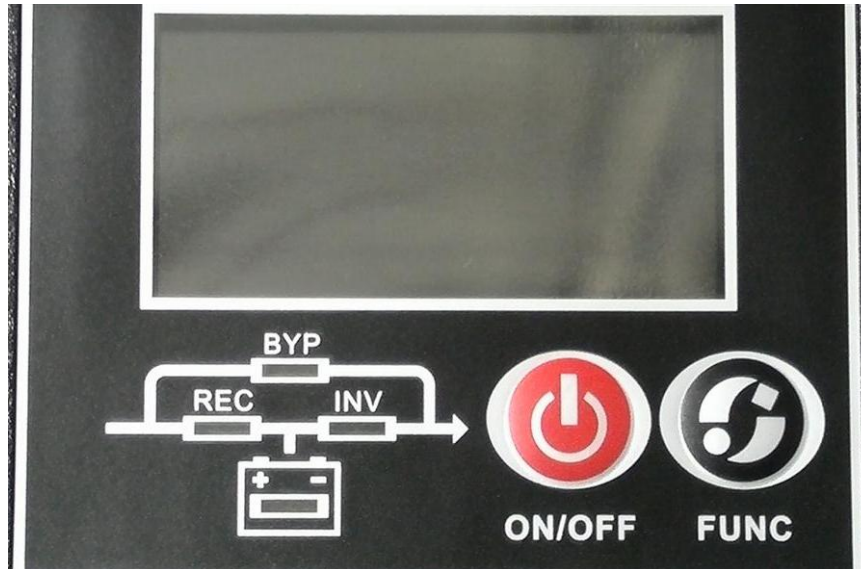

- 2) Press ON/OFF button for about 2.5 seconds, the LCD will light up.



2、 enter setting mode

Press ON/OFF and FUNC button for 3 seconds to enter setting mode




3、 setting rated voltage

Press FUNC button to change the rated voltage and then press ON/OFF button to confirm。




4、 setting rated frequency

Press FUNC button to change the rated frequency and then press ON/OFF button to confirm。

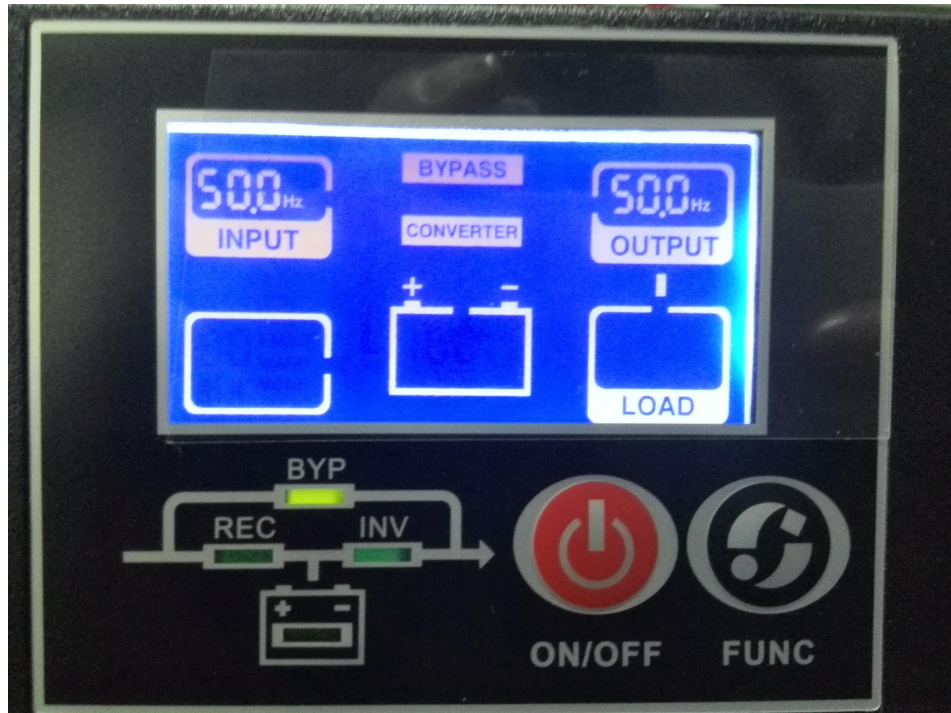

5、 setting working mode


Press FUNC button to change the working mode and then press ON/OFF button to confirm。

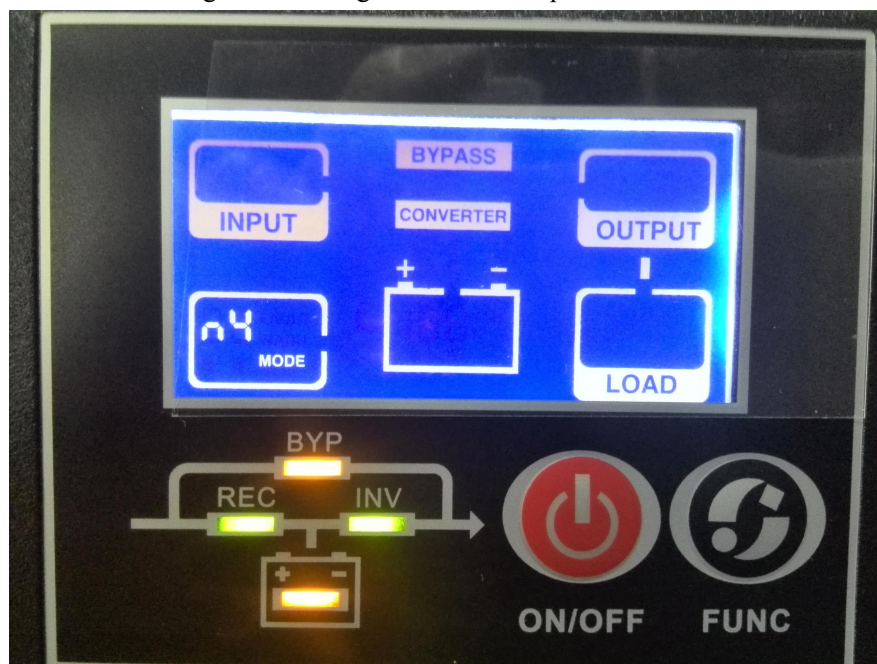

note: The first letter "n" means normal mode, and "E" means ECO mode.

6、 setting communication Protocol

Press FUNC button to change the protocol and then press ON/OFF button to confirm。

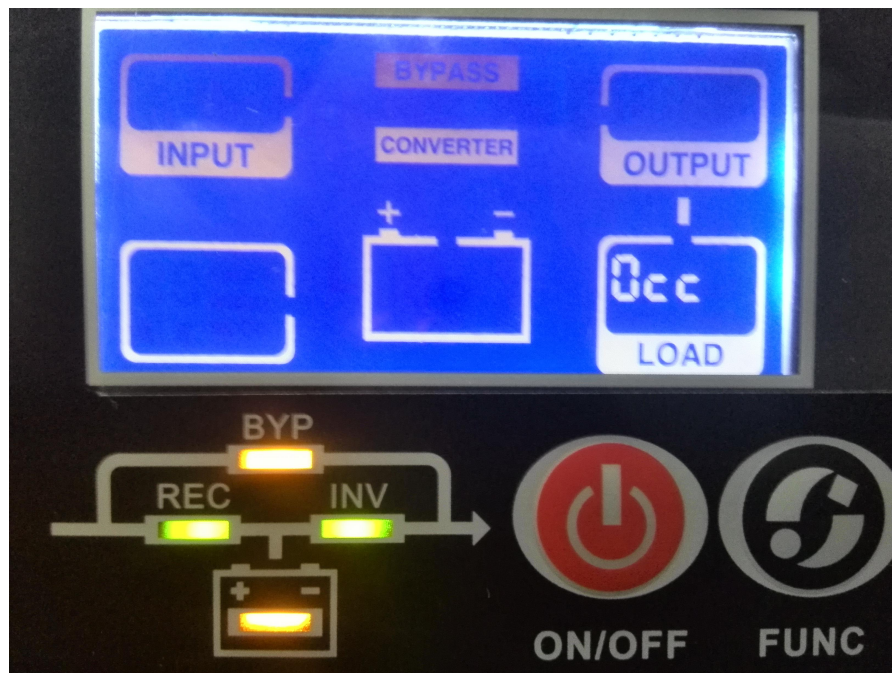

note:"0cc" means modbus protocol. "1cc"means SNT protocol.

7、 confirm all the settings

Press ON/OFF to confirm all the settings 。



note: if you found the settings display on the LCD is not you want, Press FUNC will return to step 2, or press FUNC and ON/OFF for 3 seconds will quit the setting mode without saving.

8、 save all the settings

Press ON/OFF again to save all the settings, A few seconds later, the UPS will power off. setting ok.

